


FI Asennusohje  
 S Installation instruktioner  
 N Installationsinstruktioner  
 DK Installationsinstruktus  
 NL Installatievoorschrift  
 D Montageanweisung  
 F Instructions d'installation  
 ES Instrucciones de montaje  
 I Istruzioni di montaggio

## ML6421A,B/ML7421A,B


### Electric Linear Valve Actuators

#### INSTALLATION INSTRUCTIONS

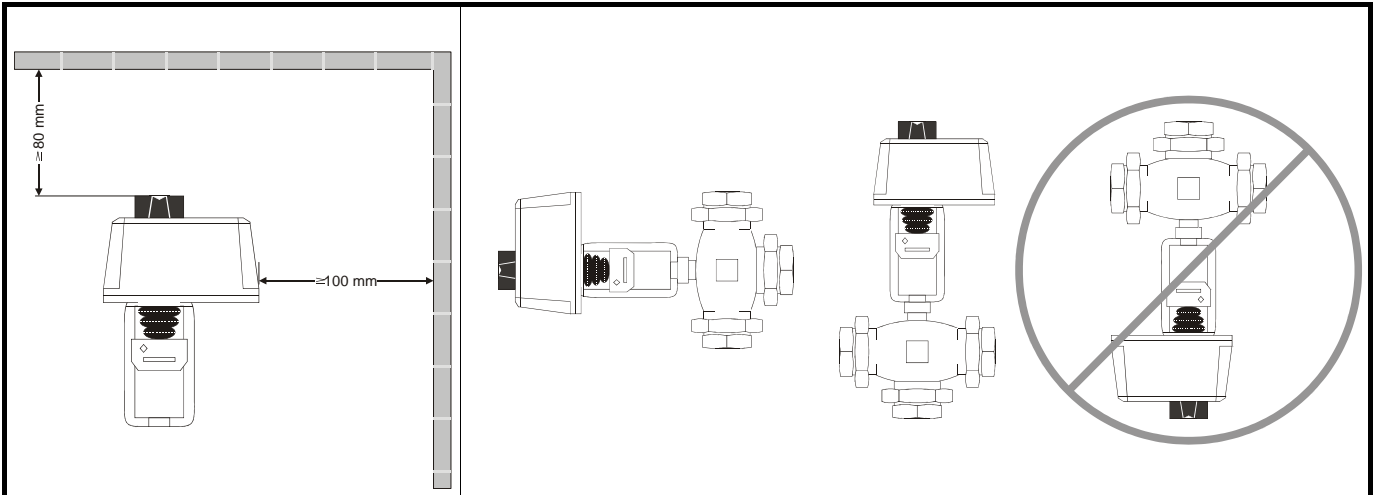


#### A1-A7: Mounting


mounting  
 D Einbau  
 F montage  
 I montaggio  
 NL montage  
 DK montere  
 N montering  
 FIN asentaminen  
 S montera  
 E montaje

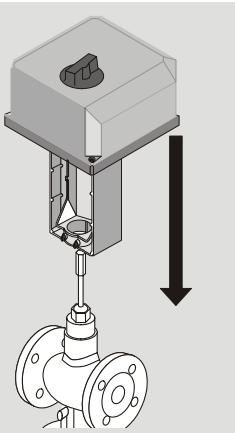


#### A1

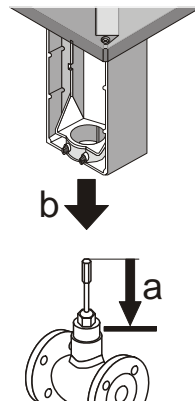


#### A2

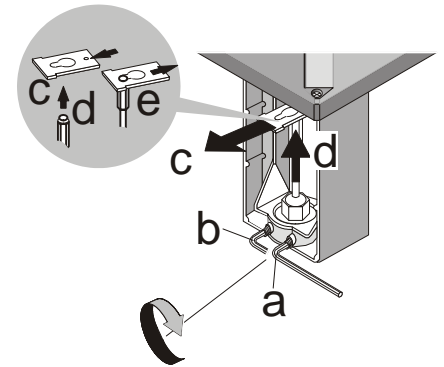


#### A3

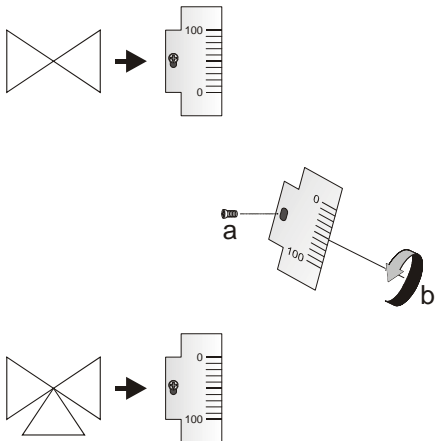

#### A4

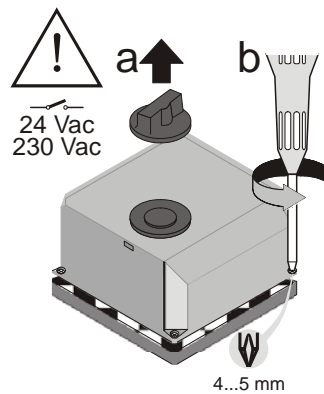

#### A5

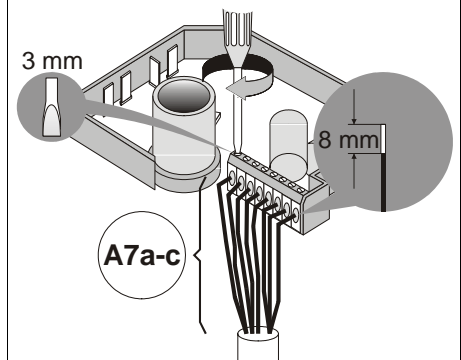

<p><b>A6: ML7421A,B</b></p> <p>W3 10 V 20 mA 10 V 20 mA</p> <p>W1 (W4 = □) 50 100</p> <p>W2 2...10 V 4...20 mA 0...10 V 0...20 mA mA V</p>	<p><b>A7a: ML7421A,B (0/2...10 V)</b></p> <p>position Y 0(2)...10 V 2...10 V 24 V⊥ 24 V⊥ 24 V~ 24 V~ 1 ↓ 2 ↑</p> <p>auxiliary switches 24 Vac / 5 (3) A</p>	<p><b>A7b: ML6421A,B (24 V)</b></p> <p>24 V~ 24 V~ 1 ↓ 2 ↑ 24 V⊥ 4 5</p> <p>auxiliary potentiometer auxiliary switches 24 Vac / 5 (3) A</p>
<p><b>A7c: ML6421A,B (230 V)</b></p> <p>N 230 V~ 1 ↓ 2 ↑ L 4 5</p> <p>auxiliary switches 250 Vac / 5 (3) A</p>	<p><b>A8</b></p> <p>a b 24 Vac 230 Vac 4...5 mm</p>	<p><b>B: Manual</b></p>
<p><b>C: Dismounting</b></p> <p>dismounting D Ausbau F démontage I smontaggio NL demontage DK afmontere N demontere FIN purkaminen S nedmontera E desmontaje</p>	<p><b>C1</b></p>	<p><b>C2</b></p> <p>A4 → A5 → A2 → A1</p>

**Automation and Control Solutions**

Honeywell GmbH  
 Böblinger Straße 17  
 D-71101 Schönaich / Germany  
 Phone: (49) 7031 637 - 01  
 Fax: (49) 7031 637 - 493  
<http://europe.hbc.honeywell.com>  
 Subject to change without notice. Printed in Germany  
 MU1B-0194GE51 R0106B